

2.4GHz
802.11b

Wireless-B

Media Adapter

Quick Installation for Windows 2000 and XP Only

1

Connect the Wireless-B Media Adapter for Setup

It is strongly recommended that you set up the Adapter using a wired computer. (This computer must have an Ethernet network adapter installed.)

If you want to set up the Adapter using a wireless-equipped computer or your TV, refer to the User Guide on the Setup CD-ROM.

- A** Attach the antenna to the Adapter.
- B** Connect the Ethernet network cable to the Ethernet port of your computer's Ethernet (LAN) network adapter.
- C** Connect the other end of the cable to the LAN port on the Adapter.
- D** Connect the power adapter to the Adapter's Power port and an electrical outlet.
- E** Press the power button on the Adapter's front panel.

NOTE: When the Adapter establishes a connection to the wired network, the Ethernet LED will light up. If it does not, then push the Uplink button on the Adapter's back panel. Power the Adapter off and back on again. Make sure the cable connections are secure.



2



Set up the Wireless-B Media Adapter

- A** Insert the Setup CD-ROM into your PC's CD-ROM drive. The Setup Wizard should run automatically, and the Welcome screen should appear. If it does not, click **Start**, and then click **Run**. In the **Open** field, enter **D:\setup.exe** (if "D" is the letter of your CD-ROM drive).

- B** On the **Welcome** screen, click **Setup**.
- C** If you are using the Adapter for the first time, click **Install** to install the Adapter Utility on your PC. If the Adapter Utility has already been installed, click **Skip** and proceed to step I.
- D** If the latest Windows Installer components are not detected on your PC, you will see Figure D, which will ask you to update them. Click **Next**.

After these components are updated, you will be asked to reboot your PC. Click **Yes**. After the PC reboots, you will be returned to the screen shown in Figure C. Click **Install** and proceed to step E.

- E** If Microsoft .NET Framework version 1.0 is not detected on your PC, then you will see Figure E, which will ask you to install it. Click **Next**.

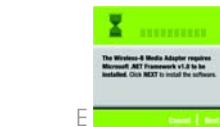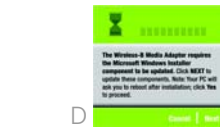

- F** Windows will ask you if you want to install the Microsoft .NET Framework Package. Click **Yes**. (The installation may take a few minutes.)

- G** Read the License Agreement, and click **Next** to accept it.
- H** The **Select Music and Picture Folders** screen will appear. To use the music and pictures held in the default folders, click **Next**. To use a different folder, click **Add** and follow the on-screen directions.

- I** When you see the screen shown in Figure I, make sure the Adapter's Ethernet LED is solidly lit. This indicates that the Adapter is properly connected to either a wired computer or router. Then click **Next**.

- J** The screen shown in Figure J displays a list of Wireless-B Media Adapters that have been found on your network, as well as settings for the Adapter whose name is highlighted. To select the Adapter you are currently installing, click its name in the **Adapters Found** box. Then click **Next**.



- K** On the screen shown in Figure K, choose whether the Adapter will be connected to your wireless or wired network AFTER you have configured it.

If you will connect the Adapter to your PC or router wirelessly, then click **Yes** for the **Wireless Network** choice.

If you will connect the Adapter to your PC or router using an Ethernet network cable, then click **Yes** for the **Wired Network** choice.

Click **Next**.

- L** On the **Basic Settings** screen, enter a unique name for the Adapter in the **Device Name** field.

If your network has a router or other DHCP server, select **Automatically** for the Network Setting, and click **Next**.

If the Adapter requires a static IP address, select **Static IP**. Enter a unique IP Address for the Adapter, and then enter your network's Subnet Mask. Click **Next**.



- M** If you will connect the Adapter to your PC or router using an Ethernet network cable AFTER configuration, then go to step O.

If you will connect the Adapter to your PC or router wirelessly AFTER configuration, then the **Basic Wireless Settings** screen will appear. (See Figure M.)

For its mode, select **Infrastructure** if the Adapter will communicate using an access point or wireless router. Select **Ad-Hoc** if it will communicate directly with a wireless PC.

Enter the SSID or name of your existing wireless network.

If the Adapter is set to **Ad-Hoc** mode, then select the channel setting of your existing wireless network.

Select the authentication type used by your network. **Open System** or **Shared Key**. If you are not sure about which setting to use, Linksys recommends that you keep the default, **Open System**.

Click **Next**.



3 Connect the Wireless-B Media Adapter to Your TV and Stereo

N The *Wireless Security Settings* screen will appear. To enable WEP encryption, select a level of WEP encryption, **64-bit** or **128-bit**, and enter a Passphrase. If you want to enter the WEP key manually, then complete the **KEY #1** field.

NOTE: The Adapter's WEP settings must match the WEP settings of your existing wireless network.

To disable WEP encryption, keep the default, **Disabled**.

Click **Next**.

O Review your settings on the *Confirmation* screen. To save your new settings, click **Save**.

P On the *Congratulations* screen, click **Exit**. The Wireless-B Media Adapter is now properly configured.



N



O



P

A Press the Adapter's power button on its front panel to power it off.

B Unplug the power adapter from the Adapter's Power port and electrical outlet.


C Unplug the Ethernet network cable from the Adapter's LAN port and your computer's Ethernet (LAN) port.

Make sure you keep the computer powered on because it will communicate with the Adapter and send music and pictures.

D Move the Adapter and its power adapter to the TV.

E If you have a stereo, go to the "Connecting to Your TV and Stereo" section.


If you do not have a stereo, go to the "Connecting to Your TV Only" section.

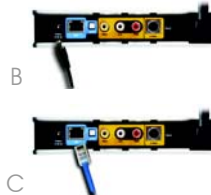

B

C

Connecting to Your TV and Stereo

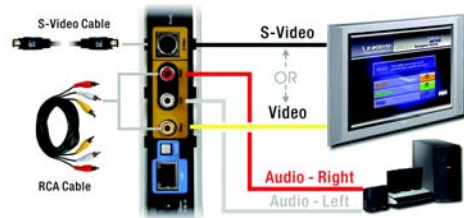

A If your TV has an S-video input, then connect the S-video cable to the Adapter's S-video port and the TV's S-VIDEO IN port.

If your TV does NOT have an S-video input, then connect the yellow connectors of the RCA cable to the Adapter's Video port and the TV's VIDEO IN port.

NOTE: If your TV and stereo are located far apart from each other, you may have to use a separate RCA cable for the audio connections described in step B.


B Connect the red and white connectors of the RCA cable to the Adapter's Left and Right ports and the stereo's AUDIO IN ports.

C Power on your TV. Select the TV channel or input that the Adapter will use.

D Power on your stereo, and select the stereo input that the Adapter will use.

E Proceed to "Step 4: Connect the Wireless-B Media Adapter to Your Network."

Connecting to Your TV Only

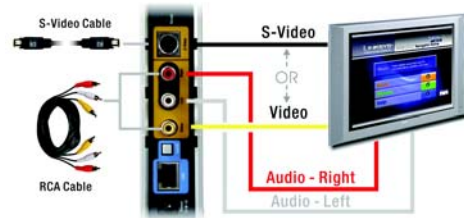

A If your TV has an S-video input, then connect the S-video cable to the Adapter's S-video port and the TV's S-VIDEO IN port.

If your TV does NOT have an S-video input, then connect the yellow connectors of the RCA cable to the Adapter's Video port and the TV's VIDEO IN port.

B Connect the red and white connectors of the RCA cable to the Adapter's Left and Right ports and the TV's AUDIO IN ports.

C Power on your TV. Select the TV channel or input that the Adapter will use.

D Proceed to "Step 4: Connect the Wireless-B Media Adapter to Your Network."

4 Connect the Wireless-B Media Adapter to Your Network

If the Adapter will connect to your computer through your wireless network, start with step B. Otherwise, start with step A.

A If the Adapter will connect to your PC through your wired network, then connect the Ethernet network cable to the Adapter's LAN port and an Ethernet (LAN) port on a wired network device, such as a router or switch.

B Connect the power adapter to the Adapter's Power port and an electrical outlet.

C Press the Power button on the Adapter's front panel.

If the Adapter connects to your wireless network, the Wireless LED will light up. Go to step D.

If the Adapter connects to your wired network, the Ethernet LED will light up. If it does not, then push the Uplink button on the Adapter's back panel. Power the Adapter off and back on again. Make sure the cable connections are secure.



B

D The Adapter Utility on your PC will automatically find the Adapter on your wireless or wired network. Then the main menu of the Media Navigator will appear on your TV. (This may take a few seconds.)

E Insert the batteries into the remote control, and use the arrow and Select buttons to select songs and pictures.

Congratulations! The installation of the Wireless-B Media Adapter is complete.



D

LINKSYS
A Division of Cisco Systems, Inc.

For additional information or troubleshooting help, refer to the User Guide on the Setup CD-ROM. You can also call or e-mail for further support.

24-hour Technical Support
800-326-7114
(toll-free from US or Canada)

E-mail Support
support@linksys.com

Website
<http://www.linksys.com> or
<http://support.linksys.com>

RMA (Return Merchandise Authorization)
<http://www.linksys.com/support>

FTP Site
<ftp://ftp.linksys.com>

Sales Information
800-546-5797 (800-LINKSYS)

Linksys is a registered trademark or trademark of Cisco Systems, Inc. and/or its affiliates in the U.S. and certain other countries. Copyright © 2003 Cisco Systems, Inc. All rights reserved.